

Known Problem of the Syntrack

Symptom:

digital Part does work (LEDs and so on) but there is no sound or only distorted sound.

Reason:

D12 and/or D13 are damaged.

Remedy:

replace D12 and D13 with 1N4002, 1N4003, 1N4004, 1N4007 or similar.

Assembly plan:

